



- Notes:
1. U1 Can be replaced with CUI_7803_1000 to change all +5V to 3.3V. U2 then would not be used.
 2. Jumper JP1 is used to change the pull up value of the inputs.
 3. JP2 is used to determine if motor enable is high or low.

Laser Interface PCB Schematic
 B32002